


# Instructions to Install Mayday 2.1

## Step 1

Download Mayday 2.1 from <http://maydayboards.com/downloads/>


## Step 2

Install Mayday 2.1  
Follow prompts to install

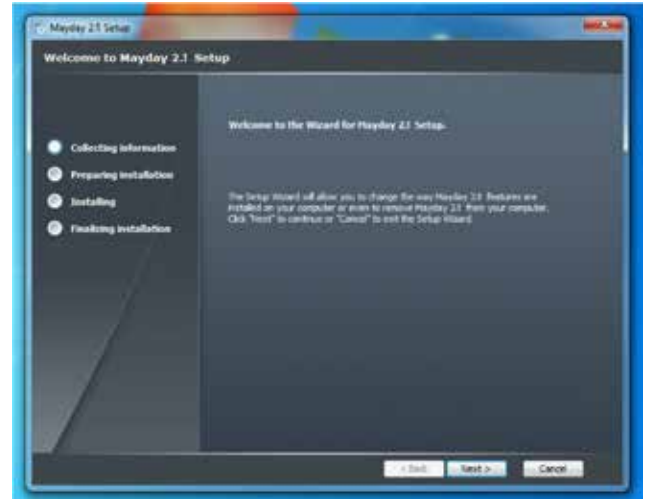


## Step 3

Open Mayday 2.1  
From desktop or start menu

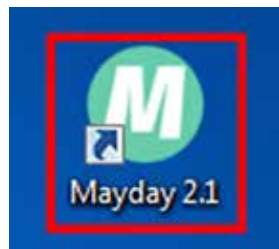


or

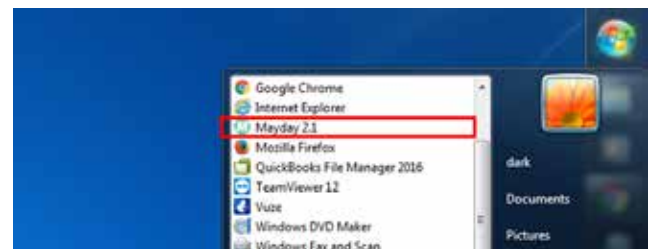

## Updating to Mayday 2.1

1. Connect your Mayday to your computer via USB and navigate to “Update” page.
2. Select the “COM Port” that your Mayday is connected to. (most commonly the highest number)
3. Click the browse button and select the “.hex” file.
4. Click the “Update” button.

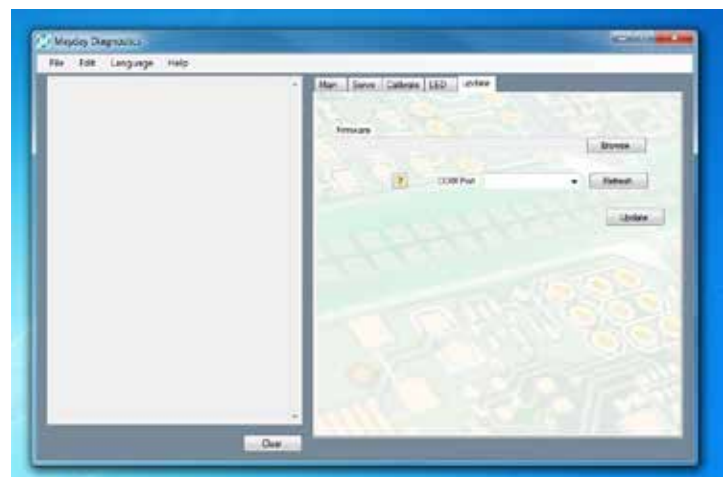


# Common Trouble shooting

## If You Can't Update

When you open Mayday 2.1 and visit the update page, if you see "Can't find AVR Dude" then WinAVR is either not installed or improperly installed.

To fix this problem reinstall Mayday 2.1 (see pg1)

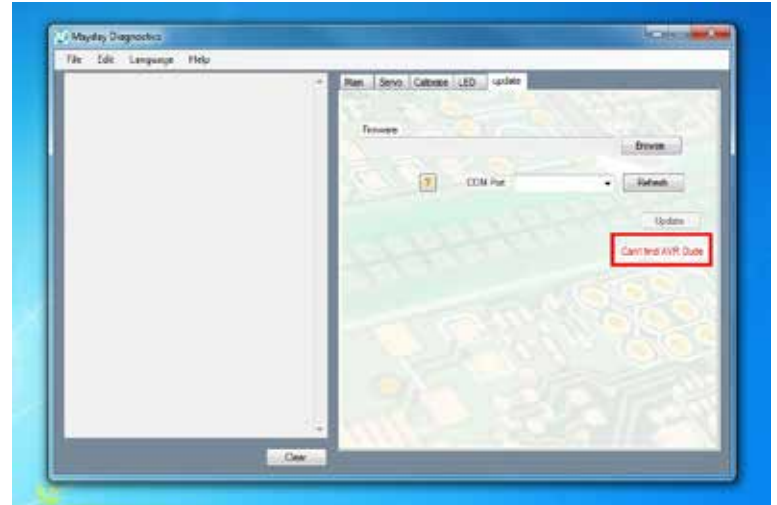

## If you cant find your Maydays COM Port

1. Open your "Device Manager" while your Mayday is plugged in.
2. Click the drop down arrow next to the "Ports (COM & LPT)"
3. Your Mayday will be called "USB Serial Port (COM\*)"

If you cant find your Mayday in a COM port then Mayday is not was installed improperly.

To fix install Mayday 2.1 (see pg1)

